Trespa Pura NFC®

Flush sidings

Installation manual [UK/EN]

live.trespa.com

TRESPA®

1

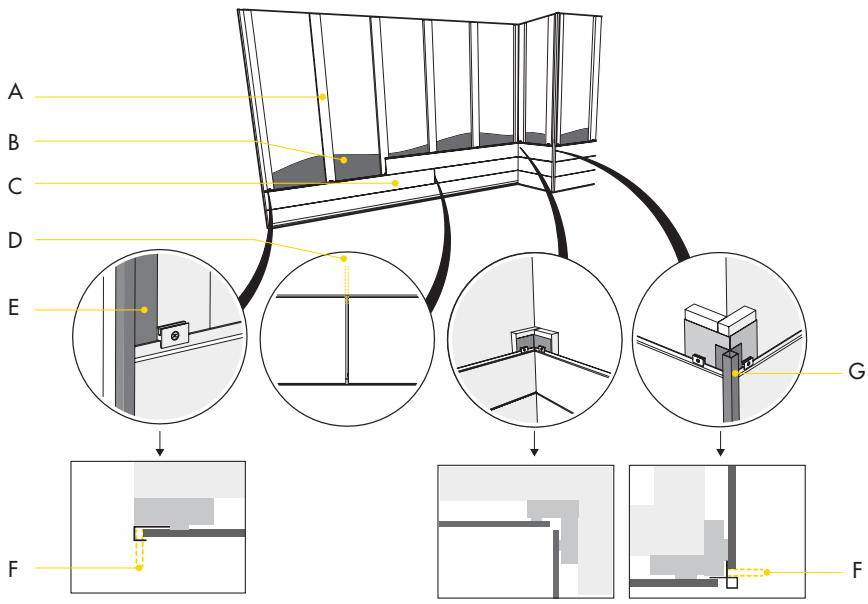
A
B
C
D
E
F
G
F

2

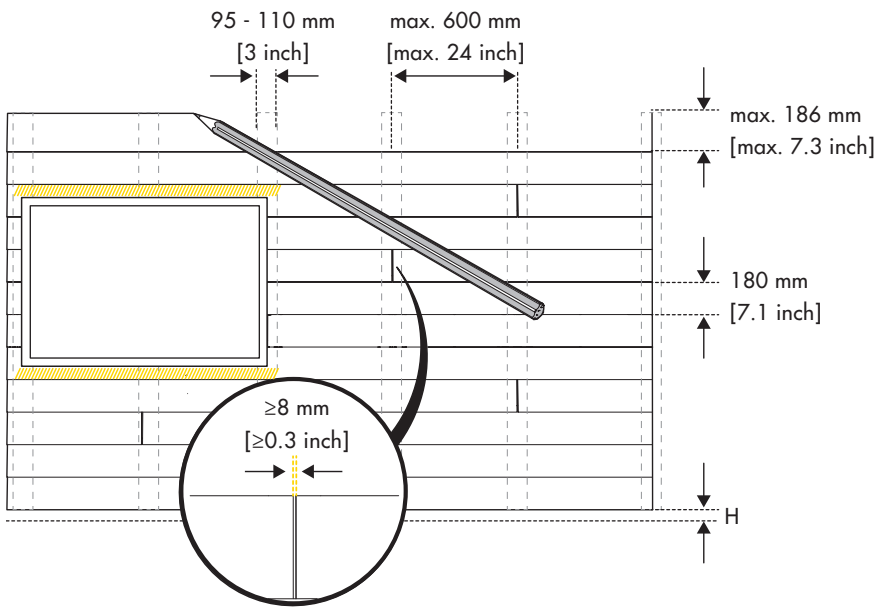
95 - 110 mm
[3 inch]
max. 600 mm
[max. 24 inch]
max. 186 mm
[max. 7.3 inch]
180 mm
[7.1 inch]
≥8 mm
[≥0.3 inch]
H

3

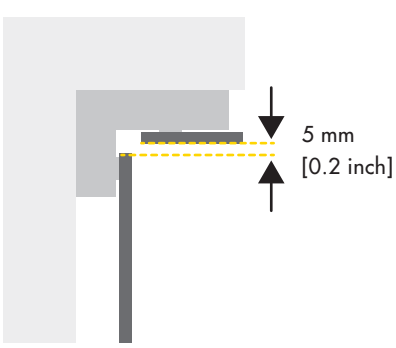
5 mm
[0.2 inch]

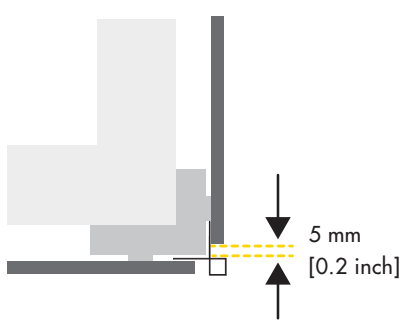
5 mm
[0.2 inch]

4

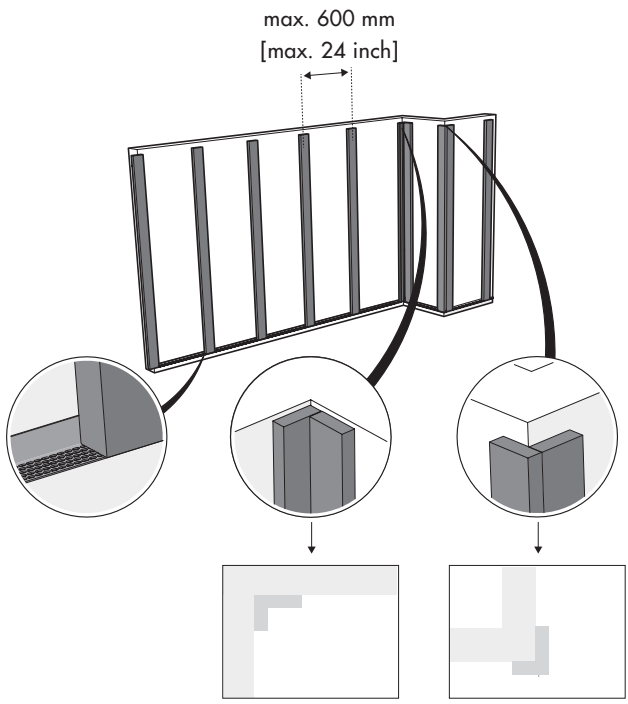

5

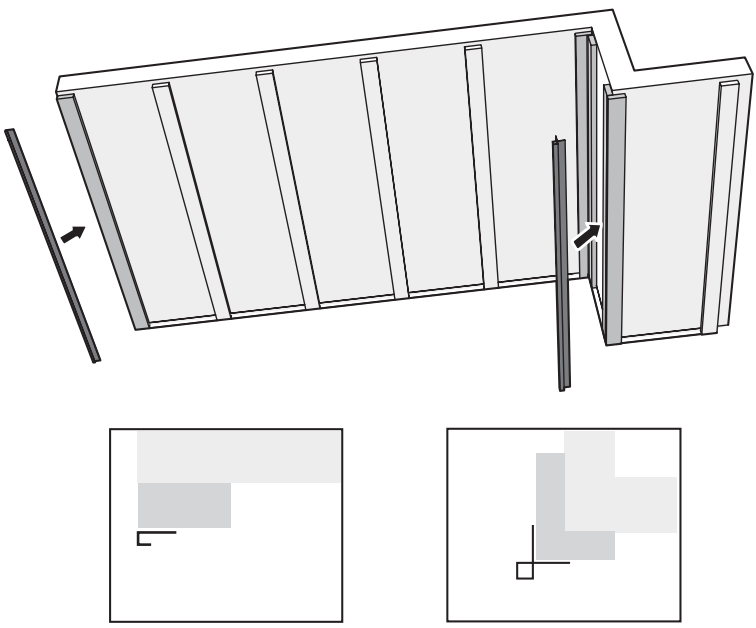

6

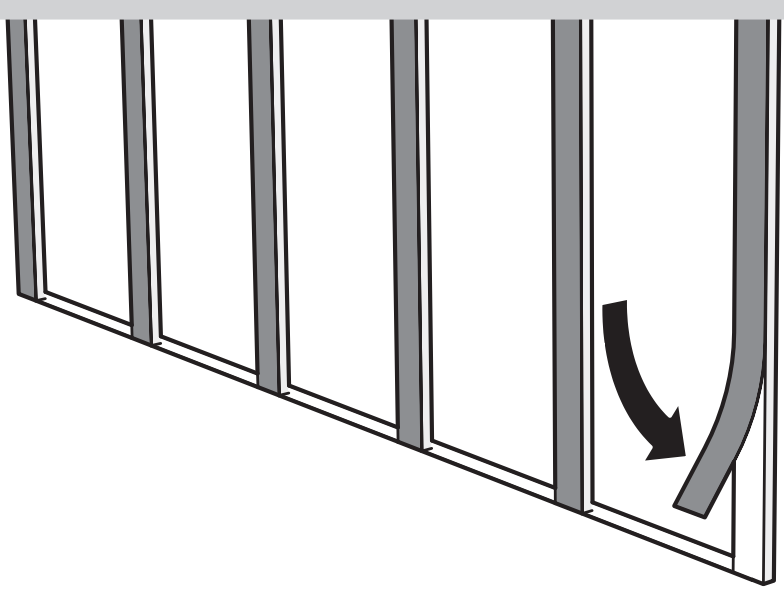

7

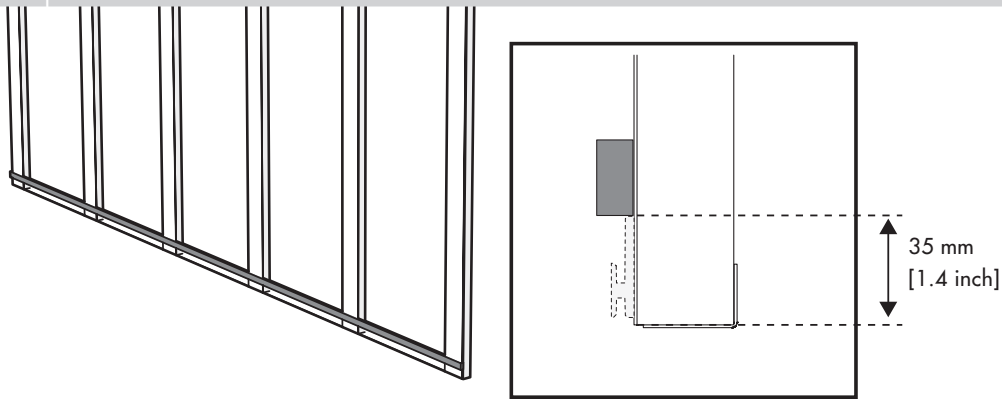

8

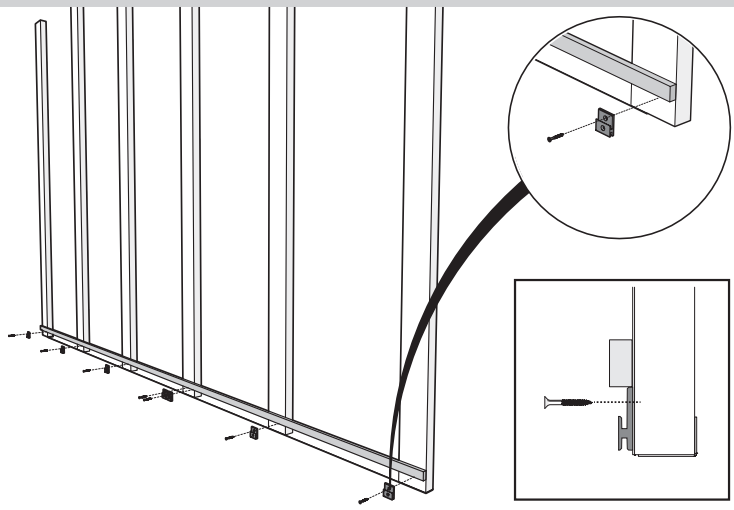

9

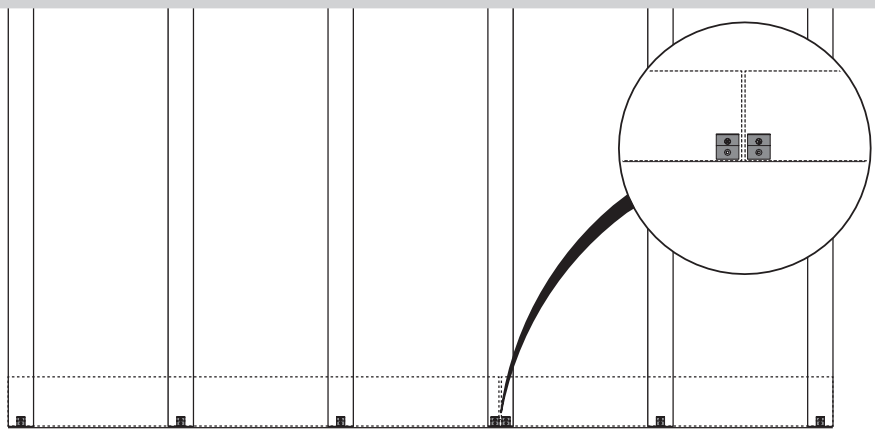

10

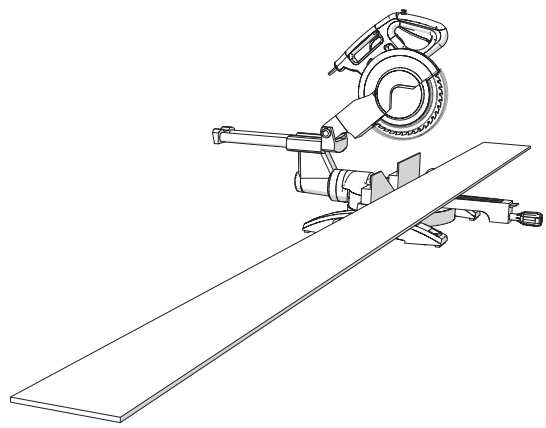

11

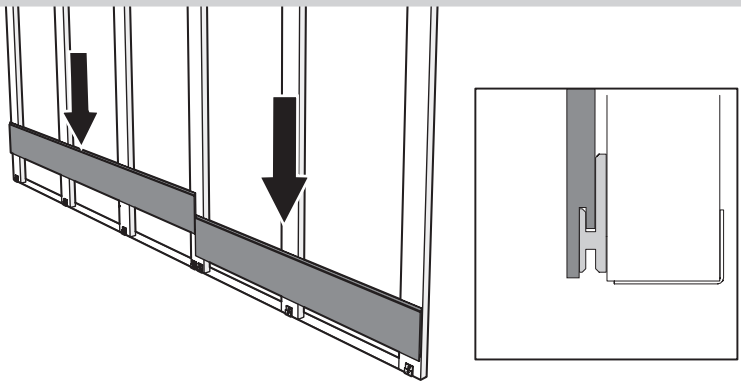

12

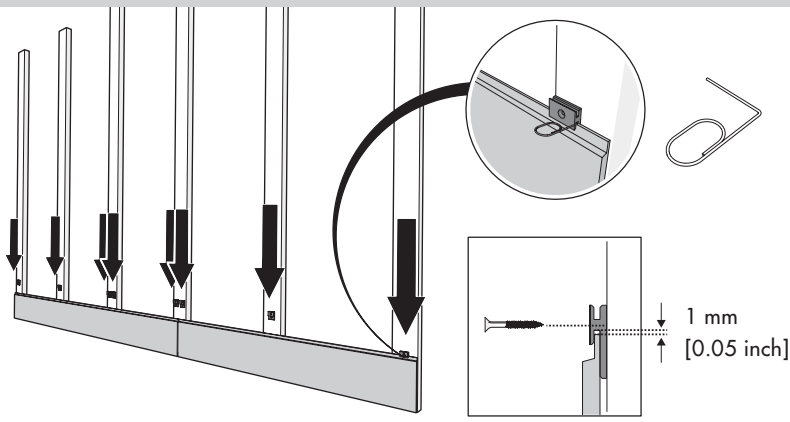

13

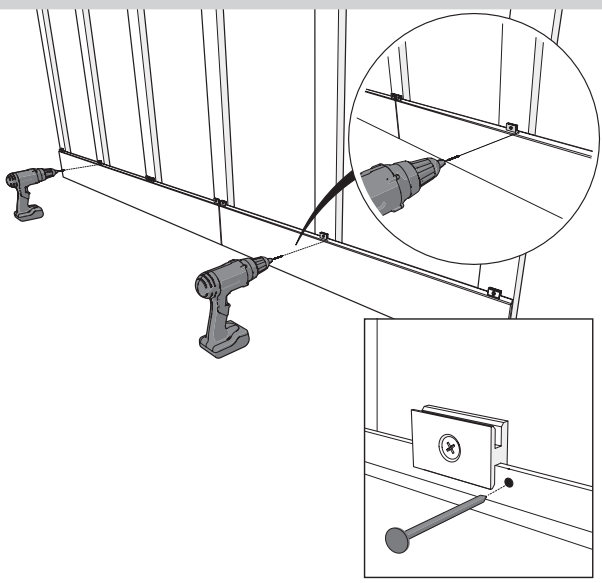

14

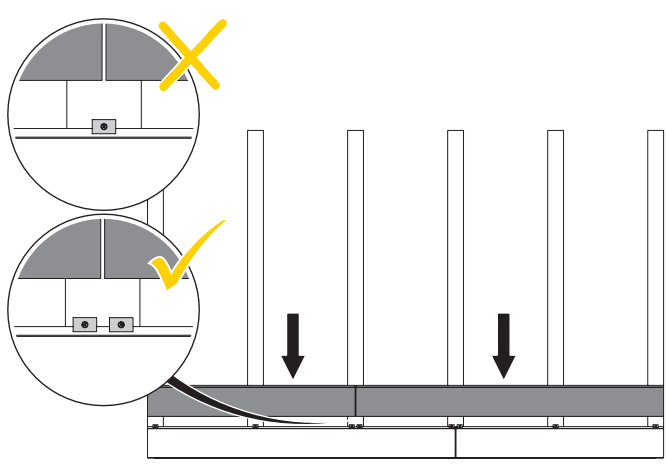

15

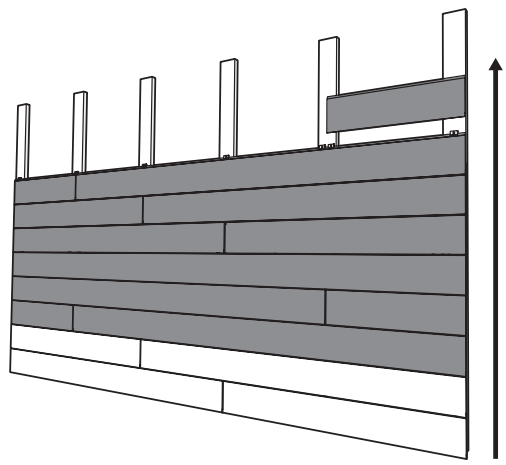

16

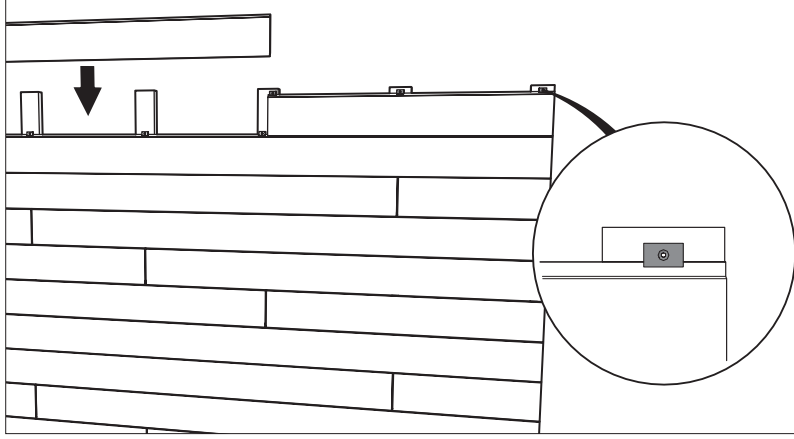

17

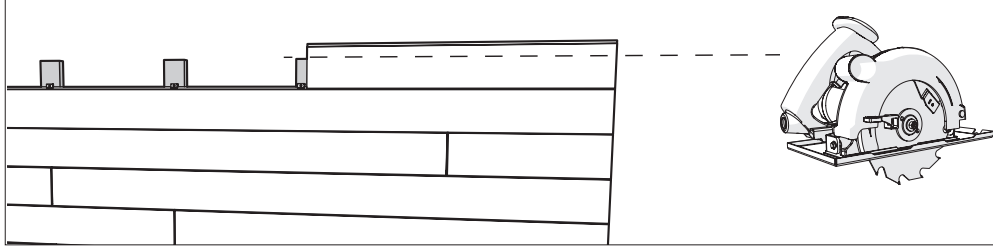

18

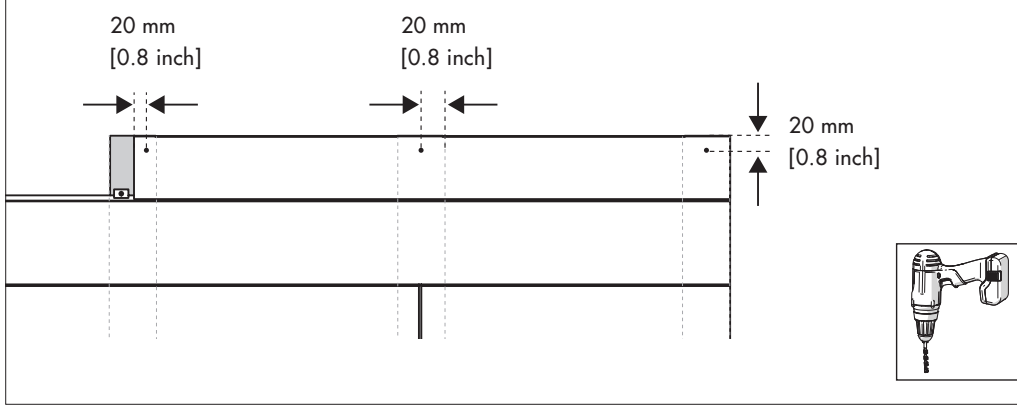

19

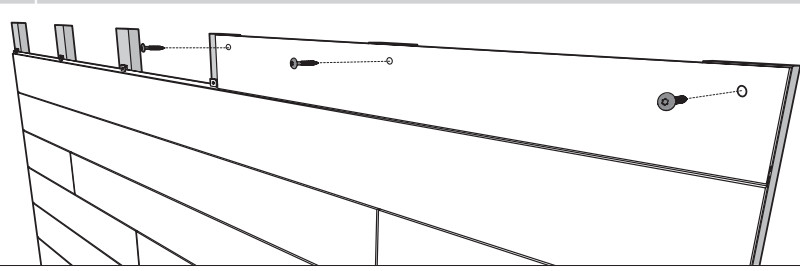

20

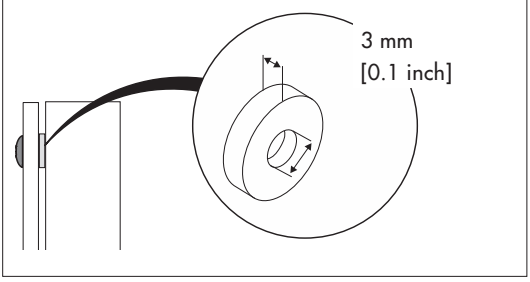
3 mm
[0.1 inch]

21

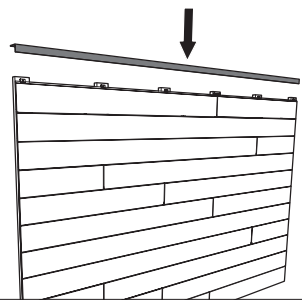

22

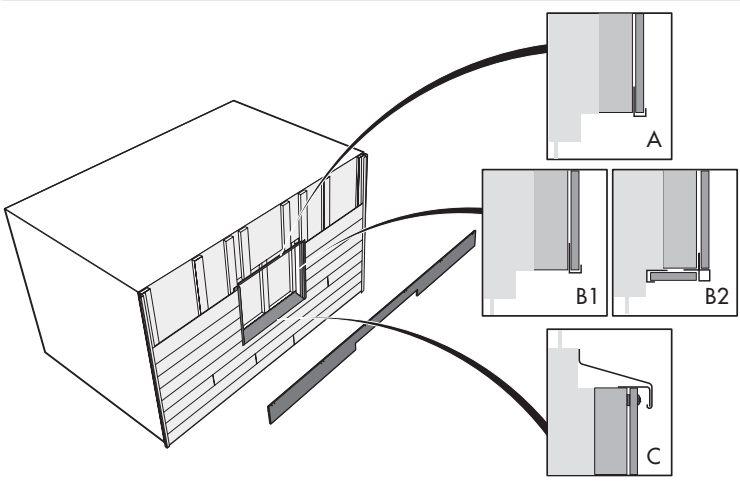
A
B1
B2
C

23

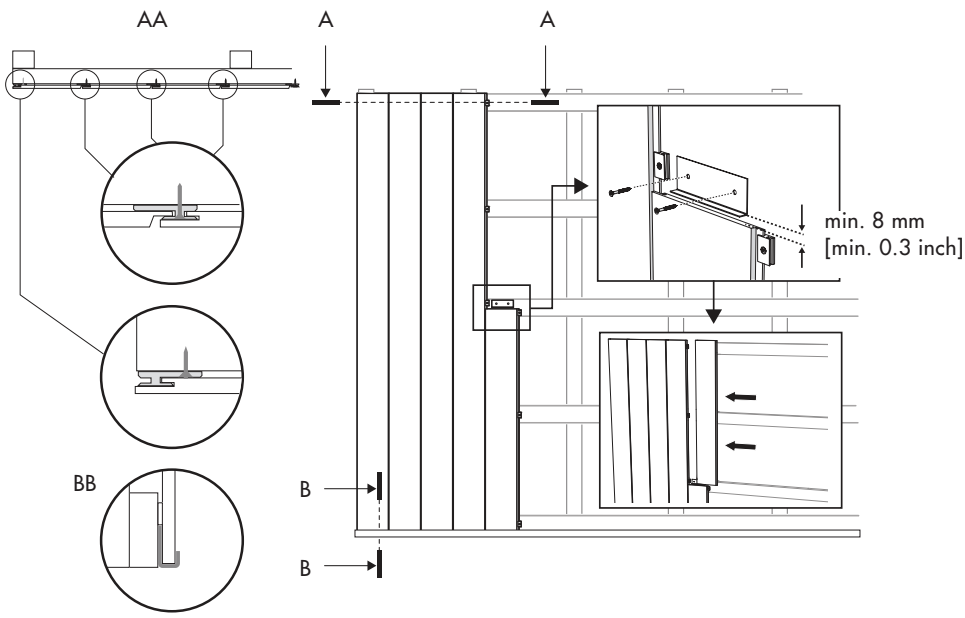
AA
A
A
min. 8 mm
[min. 0.3 inch]
BB
B
B

24

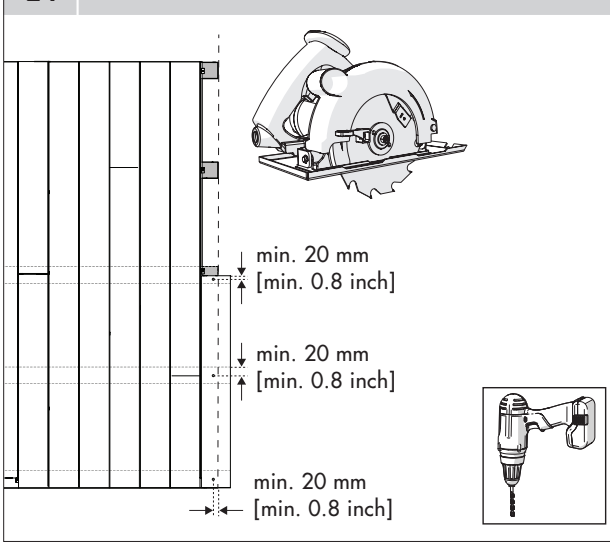
min. 20 mm
[min. 0.8 inch]
min. 20 mm
[min. 0.8 inch]
min. 20 mm
[min. 0.8 inch]

UK

FOREWORD

INSTALLATION MANUAL FOR THE PROFESSIONAL INSTALLER

Dear customer,

Congratulations on your purchase of this Trespa Pura NFC® product. These instructions contain all the necessary information in order to quickly achieve a professional result.

This Trespa Pura NFC® constitutes part of the Trespa Pura NFC® Flush siding System.
These instructions describe how you can use the Trespa Pura NFC® Flush siding System.
The other components which constitute part of the Trespa Pura NFC® Flush siding System must be purchased seperately. There is a summary of the components in Chapter 1.

The information in these instructions is important for the proper and safe use of the product.
We kindly request you to go through this information carefully, before you start to work with the product.

Keep these instructions.

INTENDED USE

Trespa Pura NFC® is intended to coat façades.
Trespa Pura NFC® is intended for the professional processor.

The user must be aware of the local building regulations.
For current product/technical information see www.trespa.info.

⚠ WARNING

Any use other than the intended use described above is considered unintended use.

This document is intended to provide general recommendations only. Trespa provides these guidelines and all testing, code and design data for informational purposes only and strongly advises that the customer, project owner and architect seek independent advice from a certified construction professional and/or engineer regarding application and installation as well as compliance with design requirements, applicable codes, laws and regulations, and test standards. Please check your local codes and applicable design requirements for proper use.

SYMBOLS IN THE INSTRUCTIONS

Safety symbols:

⚠ WARNING

In some cases the users may (seriously) injure themselves or seriously damage the product.
A warning indicates what damage may occur if the user does not carry out the procedure carefully.

⚠ CAUTION

The product may be at risk. 'Caution' indicates damage to the product if the user does not perform the procedures carefully.

NOTICE

This is a comment with additional information for the user.
A comment alerts the user to potential problems.

UK

CONTENTS

Foreword 1
Intended use 1
Symbols in the instructions 1

Important terms in these instructions used in an overview 2

Get results in four simple steps 3
1 Ensuring the correct supplies 3
2 Making a façade drawing 6
3 Ensuring the correct basic construction 6
4 Following the installation instructions 6

Annex 1
What should I look for when I place Trespa Pura NFC® Flush siding around a window? 9

Annex 2
What should I look for when I place Trespa Pura NFC® Flush siding around a dormer window? 9

IMPORTANT TERMS IN THESE INSTRUCTIONS USED IN AN OVERVIEW

SEE **IMAGE 1** Overview drawing Trespa Pura NFC® Flush siding System.

A Vertical batten
B Building paper (if applicable)
C Flush siding
D Intermediate joint
E Flush siding finish profile
F Start joint / finish joint
G Flush siding outer-corner profile

UK

GET RESULTS IN FOUR SIMPLE STEPS

YOU CAN EQUIP YOUR FAÇADE TRESPA WITH PURA NFC® FLUSH SIDING IN FOUR EASY STEPS:

1 Ensuring the correct supplies.
2 Making a façade drawing.
3 Ensuring the correct basic construction.
4 Carrying out the installation instructions.

---

1 ENSURING THE CORRECT SUPPLIES

Trespa Pura NFC® Flush siding System Components

Trespa Pura NFC® Flush siding

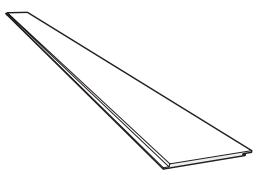

Dimensions (mm)	Available colours	Colour code
3050 x 186 x 8	Royal Mahogany Aged Ash White Pine Slate Ebony Classic Oak Romantic Walnut	PU 04 PU 17 PU 20 PU 22 PU 02 PU 08

Flush siding

SFS INTEC HPL fast fixing screw

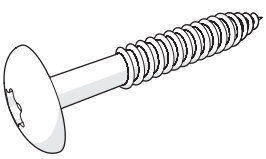

Dimensions (mm)	Available colours	Colour code
4.8 x 38	Royal Mahogany Aged Ash White Pine Slate Ebony Classic Oak Romantic Walnut	PU 04 PU 17 PU 20 PU 22 PU 02 PU 08

HPL fast fixing screw

SFS INTEC profile screw

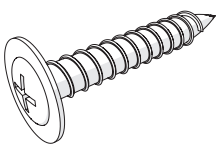

Dimensions (mm)	Available colours	Colour code
4.1 x 30	–	–

SFS profile screw

Proface® Flush siding outer-corner profile

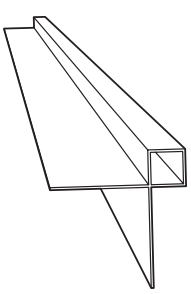

Dimensions (mm)	Available colours	Colour code
Length 3000 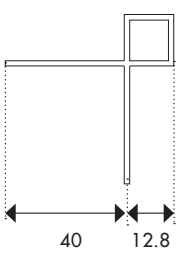	Royal Mahogany Aged Ash White Pine Slate Ebony Classic Oak Romantic Walnut	PU 04 PU 17 PU 20 PU 22 PU 02 PU 08

Flush siding outer-corner profile

UK

Proface® Flush siding finish profile

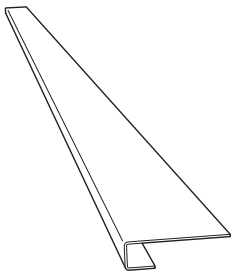

Dimensions (mm)	Available colours	Colour code
Length 3000	Royal Mahogany	PU 04
	Aged Ash	PU 17
	White Pine	PU 20
	Slate Ebony	PU 22
	Classic Oak	PU 02
	Romantic Walnut	PU 08

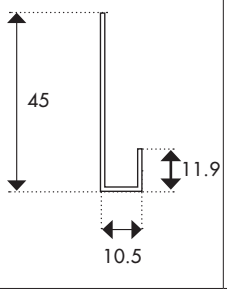

Flush siding finish profile

Proface® Flush siding support profile

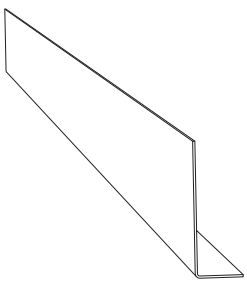

Dimensions (mm)	Available colours	Colour code
Length 3000	Aluminum	PU 00
	Royal Mahogany	PU 04
	Aged Ash	PU 17
	White Pine	PU 20
	Slate Ebony	PU 22
	Classic Oak	PU 02
	Romantic Walnut	PU 08

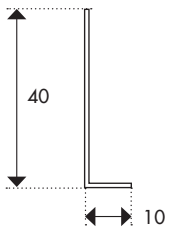

Flush siding support profile

Universal clips (including matching screws)

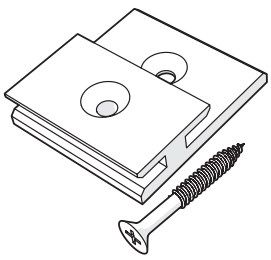

Dimensions (mm)	Available colours	Colour code
33.5 x 30 x 7.6	–	–

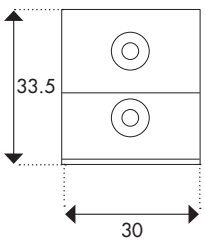

Universal clip

Positioning tool set

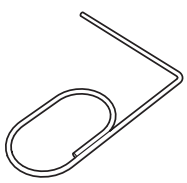

Dimensions (mm)	Available colours	Colour code
–	–	–

Positioning tool set

Materials

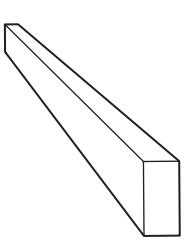

Installation bar

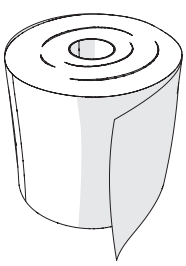

EPDM rubber. At least the width of the vertical battens



Flat head nails to fix the mounting bar and fix the flush siding

Tools

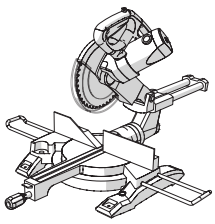

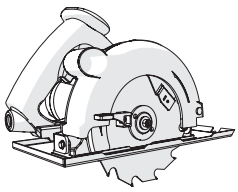

The following general guidelines apply when sawing Trespa Pura NFC® Sidings:

- **Tooth:** Alternate tooth or trapezoid flat tooth.
- **Positioning:** Always position the entering tooth at the decorative side of the Trespa Pura NFC® Siding.
- **Cutting edges:** Any sharp edges can be removed using sandpaper or a router.
- **Rake angle:** A rake angle of 45° gives the best performance.

➲ For current information regarding Trespa's machining guidelines see www.trespa.info.

Short saw or circular saw

Cordless screwdriver / drill with torque limiting coupling

Carbide-tipped HSS drill, top angle 60-80°.
Trespa Pura NFC® Sidings should be drilled with support sheets.

➲ For current information regarding Trespa's machining guidelines see www.trespa.info.

Diameter in mm	No. of revolutions	Feed rate in mm/min
5	= 3,000/min	60–120
8	= 2,000/min	40–80

Hard metals - HSS drill

UK

2 MAKING A FAÇADE DRAWING

Points for attention when creating the façade drawing:

- Intermediate joints are located in the middle of the vertical battens.
- The width of the intermediate joint must be 8 mm.
- The Flush sidings must overlap by 6.5 mm after mounting.
- The distance between the vertical battens is up to 600 mm.
- The vertical battens must be 95-110 mm wide.
- At outer corners use Flush siding outer-corner profiles.
- The distance between the Flush sidings and a Flush siding outer-corner profile (the end joint) must be 5 mm.
- Is there an interruption (window, door, etc.) in the façade? Then make sure the Flush sidings are not sawn too small. You can influence this by adjusting the starting height (H).

SEE **FIGURE 2** Before you begin, make a plan in the form of a façade drawing

SEE **FIGURE 3** The end profiles must be at least 5 mm wide

3 ENSURING THE CORRECT BASIC CONSTRUCTION

Points for attention for the basic construction

- Trespa® Pura® can be used as part of a ventilated façade system which allows air circulation between the façade material and the water resistant layer behind it.
- To ensure natural ventilation, the façade is installed with a cavity of at least 20 mm deep immediately behind the façade material.
- Install vertical battens, spaced no more than 600 mm apart.
- Provide ventilation openings of at least 50cm²/m at the bottom and top of the cladding, as well as at each interruption in the façade (e.g. window frames).
- Where required, finish the ventilation spaces with a ventilation profile.
- Ensure a suitable corner construction.

SEE **FIGURE 4** Ensure proper base construction

4 FOLLOW THE INSTALLATION INSTRUCTIONS

1. Placing the Flush siding outer-corner profiles and Flush siding finish profiles (if they appear in your façade drawing)

SEE **FIGURE 5** Place to the Flush siding outer corner profiles and Flush siding finish profiles

2. Apply strips of EPDM rubber

Use a strip of EPDM rubber which is at least as wide as the vertical batten.

SEE **FIGURE 6** Apply strips of EPDM rubber

UK

3. Installing an installation bar

Install an installation bar at a distance of 35 mm from the starting height. You use the installation bar as attachment points for the first row of universal clips.

SEE **FIGURE 7**	Install an installation bar

4. Placing the first row of universal clips

- Place the first row of universal clips with the installation head down.
- Screw in the universal clips, use the top hole for this.
- Do you plan to equip the first row of Flush sidings with an intermediate joint? Then place two universal clips.
- Do not place the clip on a finishing profile.

SEE **FIGURE 8**	Place the first row of universal clips

SEE **FIGURE 9**	Place two universal clips where you want to make an intermediate joint

5. Sawing the Flush sidings to size

Saw the sidings with their decorative side facing up.

➲ For current information regarding Trespa's machining guidelines see www.trespa.info.

SEE **FIGURE 10**	Saw the Flush sidings to size

6. Placing the bottom row of Flush sidings

- Remove the installation bar.
- Place the Flush sidings by sliding them from the top of the universal clips.

SEE **FIGURE 11**	Place the bottom row of universal clips

7. Installing the second row of universal clips

- Place the universal clips with the installation head facing up.
- Screw in the universal clips, use the top hole for this.
- Check that the intermediate joint is at least 8 mm wide.
- Use the positioning tool set provided to allow 1 mm vertical expansion.
- Do you plan to equip the next row of Flush sidings with an intermediate joint? Then place two universal clips at the position of the joint.

SEE **FIGURE 12**	Place the second row of universal clips and screw them in. Use the positioning tool set provided for this.

8. Fixing every Flush siding with a flat head nail

- Drill one hole of 2 mm in the thin part of each Flush siding.
- Fix the Flush siding with a flat head nail.

SEE **FIGURE 13**	Fix the façade strip with a flat head nail

UK

9. Placing the second row of Flush sidings

- When placing a row of Flush sidings always check that an intermediate joint is supported on both sides by its own universal clip.
- Check that the intermediate joint is at least 8 mm wide.
- Fix every Flush siding with a flat head nail.

SEE **FIGURE 14**	When placing a row of Flush sidings check the support of the intermediate joint

10. Installing the other row of Flush sidings

Install the other row of Flush sidings from below to above.

SEE **FIGURE 15**	Install the other row of Flush sidings from below to above

11. Placing the last row of Flush sidings

Finish with universal clips if you have enough space.

Not enough space?

- Saw the top row of Flush sidings to size.
- Drill 8 mm holes.

NOTICE

Drill holes at 20 mm from the top of the Flush siding,
at least 20 mm from the side of the vertical batten, and
at least 20 mm from the end of the Flush siding.

- Tip: drill one of the holes 5 mm. You fix the siding here.
- Fix the Flush siding with the fast fixing screws. Place an installation ring of 3 mm between the vertical batten and the Flush siding.

SEE **FIGURE 16**	Finish with universal clips if you have enough space
SEE **FIGURE 17**	Don't have enough space? Saw the bottom row of Flush sidings to size
SEE **FIGURE 18**	If you have sawn off the flush sidings, drill 8 mm holes
SEE **FIGURE 19**	Install with HPL Fast fixing screws. Place an installation ring between the Flush siding
SEE **FIGURE 20**	Place a 3 mm installation ring between the Flush siding and the vertical batten

12. Ensuring the correct finishing

Ensure the correct finishing. For example, use a roof trim to cover the top row of universal clips (or HPL fast fixing screws).

SEE **FIGURE 21**	Finish with, for example, a roof trim

UK

ANNEX 1

WHAT SHOULD I LOOK FOR WHEN I PLACE TRESPA PURA NFC® FLUSH SIDING AROUND A WINDOW?

- Support the Flush siding directly above the window with a Flush siding finish profile (A).
- Finish the side of the window with a Flush siding finish profile (B1) or a Flush siding outer-corner profile (B2).
- Finish the underside of the window with a weather moulding (C).

SEE **FIGURE 22** Finishing around a window

ANNEX 2

WHAT SHOULD I LOOK FOR WHEN I PLACE TRESPA PURA NFC® FLUSH SIDING VERTICALLY?

- Place horizontal battens placed 600 mm apart and ensure sufficient ventilation space behind the horizontal battens to allow for natural ventilation
- Apply strips of EPDM rubber on the horizontal battens
- Mount the flush siding vertically on the horizontal battens, supported by the Proface® support profile.
- In case of an inner joint:
  - Ensure the joint in the middle of the horizontal batten, allowing sufficient space for the fixing clip below and above the joint.
  - Cut the support profile to 100 mm length.
  - Place the profile with 8 mm joint above the flush siding underneath.
- Saw the last flush siding vertically to size; drill 8mm holes at least 20 mm from the top of the siding, 20 mm from the side of the siding/horizontal batten; fix the siding with fast fixing screws.

DISCLAIMER

These terms apply to the use of this document and such use automatically means that the other party agrees to these terms. The information provided by Trespa International B.V. ("Trespa") in this document is solely indicative. Trespa is unable to warrant the accuracy and completeness of this information. Trespa may change the information included in this document at any time and without further notice. Trespa's customers and third parties must ascertain that they have the most recent document (for the most recent version, please consult: www.trespa.com). No rights can be derived from the information provided; the use of the information is at the other party's risk and responsibility. Trespa does not warrant that the information in this document is suitable for the purpose for which it is consulted by the other party. This document does not contain any design, structural calculation, estimate or other warranty or representation that customers and third parties may rely on. This document does not guarantee any properties of Trespa products. Colors used in Trespa's communications (including but not limited to printed matter) and in samples of Trespa's products may differ from the colors of the Trespa products to be supplied. Samples are not intended for use in product tests and are not representative of characteristics of the Trespa products. Trespa's products and samples are produced within the specified color tolerances and the colors (of production batches) may differ, even if the same color is used. The viewing angle also influences the color perception. Metallics panels feature a surface whose color appears to change based on the direction from which it is viewed. The specified color stability and color specifications relate only to the decorative surface of the Trespa products, not to the core material and samples of the Trespa products. Customers and third parties must have a professional adviser inform them about (the suitability of) the Trespa products for all desired applications and about applicable laws and regulations. Trespa does not warrant the above. The most recent version of the current delivery program and the Material Properties Datasheet can be found at www.trespa.info. Only the information in the most recent and valid Material Properties Datasheet should be used to select and provide advice regarding Trespa products. Trespa reserves the right to change (the specifications for) its products without prior notice.

LIABILITY LIMITATION

Trespa is not liable (neither contractual nor non-contractual) for any damage arising from or related to the use of this document, except if and to the extent that such damage is the result of wilful misconduct or gross negligence on the part of Trespa and/or its management. The limitation of liability applies to all parties affiliated with Trespa, including but not limited to its officers, directors, employees, affiliated enterprises, suppliers, distributors, agents, and representatives.

GENERAL CONDITIONS

All oral and written statements, offers, quotations, sales, supplies, deliveries and/or agreements and all related activities of Trespa are governed by the Trespa General Terms and Conditions of Sale (*Algemene verkoopvoorwaarden Trespa International B.V.*) filed with the Dutch Chamber of Commerce which can be downloaded from the Trespa website, www.trespa.com. All oral and written statements, offers, quotations, sales, supplies, deliveries and/or agreements and all related work of Trespa North America, Ltd. are governed by the Trespa North America General Terms and Conditions of Sale, which can be found on and downloaded from the Trespa website, www.trespa.com. A copy of these general conditions of sale will be provided free of charge on request. All general terms and conditions other than the conditions mentioned above are dismissed and do not apply, regardless of whether such terms and conditions are referred to on requests for offers, offer confirmations, stationery and/or other documents of the other party, even if Trespa does not expressly object to such terms and conditions.

INTELLECTUAL PROPERTY

All intellectual property rights and other rights regarding the content of this document (including logos, text and photographs) are owned by Trespa and/or its licensors. Any use of the content of this document, including distribution, reproduction, disclosure, storage in an automated data file or the dispatch of such a file without Trespa's prior written consent is explicitly prohibited. ®Trespa, Meteon, Athlon, TopLab, TopLab^{PLUS}, TopLab$^{ECO\text{-}FIBRE}$, Virtuon, Izeon, Volkern, Trespa Essentials, Trespa Pura NFC and Mystic Metallics are registered trademarks of Trespa.

QUESTIONS

Should you have any questions or comments, please do not hesitate to contact Trespa.